

iRobot® Roomba® Vacuuming Robot Use Tips

Maintaining Your iRobot Roomba

1. Clean Roomba's brushes every 2 or 3 cleaning cycles

Your iRobot Roomba comes with a cleaning tool to help you keep Roomba's brushes free of hair and other debris. For optimal cleaning performance, you should clean your Roomba's brushes every 2 or 3 cleaning cycles. If you own a pet that sheds long hair it is recommended that you remove and clean the brushes after every cleaning cycle.



Remove Roomba's brush guard



Remove brushes from Roomba



Cut hair away from brushes with cleaning tool



Remove hair with cleaning tool



Remove Roomba's brush bearings



Clean Roomba's brush bearings with the cleaning tool



Replace Roomba's brush bearings



Replace Roomba's brushes



Replace Roomba's brush guard

2. Clean Roomba's filter after each use

Roomba's filter is designed to keep Roomba's vacuuming system clear of debris. For maximum vacuum power, you should keep Roomba's filter clear of debris. Roomba's filter is easy to clean. You should clean Roomba's filter every time you empty Roomba's bin.



Depress Roomba's bin latch



Remove Roomba's bin



Empty the bin into the trash



Remove Roomba's filter



Clear filter of debris and discard



Replace Roomba's filter and bin

3. Always store Roomba on the Home Base® or plugged in

For best performance and battery life, always store Roomba on the Home Base® or with the power adapter plugged in. When Roomba is connected to the power supply it automatically receives a trickle charge that helps increase Roomba's battery life. When Roomba is on the Home Base®, always make sure that both Home Base® LEDs are lit.